


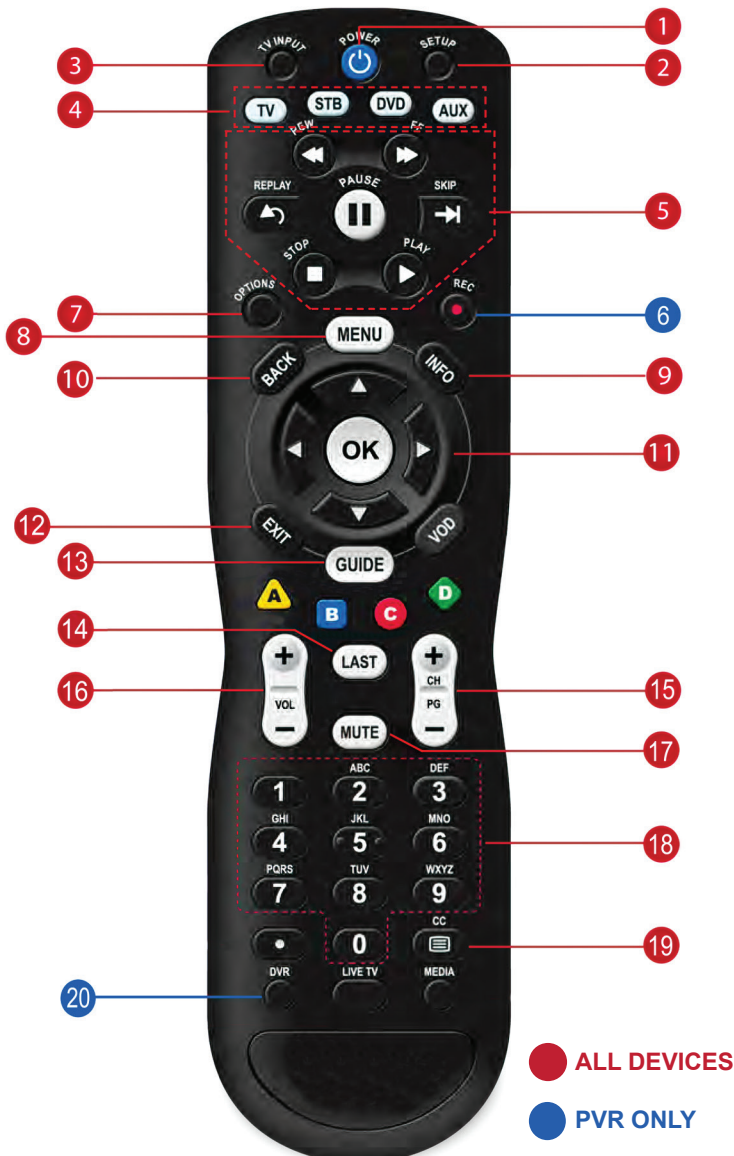

UNIVERSAL REMOTE CONTROL OVERVIEW

POWER button will control TV/Set Top Box (STB) on/off.



1 POWER

TV + POWER will turn on/off the television set only.
STB + POWER will turn on/off the STB (cable box) only.

2 SET UP

Set up remote for TV

3 TV INPUT

Changes the input (i.e. HDMI) **May depend on TV brand*

4 DEVICE CONTROL

TV: Select to control TV (See Quick Setup on back of remote)

STB (Set Top Box): Pre-programmed to control this device

DVD: Select to control DVD (If Programmed)

AUX: Select to control another device (If Programmed)

5 TRANSPORT KEYS

Controls video program for LIVE TV / PVR

REPLAY: Goes back approx. 30 seconds

REW: Rewinds video

FF: Fast forwards video

SKIP: Advances in 30 second increments

PAUSE: Pauses video

PLAY: Plays video or resumes a paused program

STOP: Stops playback of video

6 REC

Starts or stops recording a program

7 OPTIONS

Provides additional options for certain on-screen menu or highlighted item

8 MENU

Displays menu or home screen

9 INFO

Displays information about the current program

10 BACK

Goes back one level within menus

11 NAVIGATION

ARROW KEYS: Navigates within the guide/menus

OK: Executes the currently selected menu option

LEFT/RIGHT: Rewinds/Fast forwards video

12 EXIT

Exits the current menu item or back to LIVE TV

13 GUIDE

Displays the on-screen program guide

14 LAST

Changes channel to the previously viewed channel

15 CH/PG

Changes channel up/down or pages up/down within the on-screen program guide

16 VOL

Increases or decreases TV or STB volume

17 MUTE

Turns TV volume on/off

18 NUMBER KEYS

Allows direct access to specific channels/menu items

19 CC

Toggles Closed Captioning on/off

20 PVR

Enabled on PVR recorders (Ask for details)

● ALL DEVICES
● PVR ONLY